


Interior lights, servicing (Avant)

CAUTION!

Disconnect the battery Ground (GND) strap before working on the electrical system.


Notes:

- ◆ Before disconnecting the battery, determine the correct coding for the anti-theft radio.
- ◆ After reconnecting the battery, check and activate the vehicle's electrical equipment (radio, clock, comfort and convenience features, etc.) as outlined in this Repair Manual or the Owner's Manual.

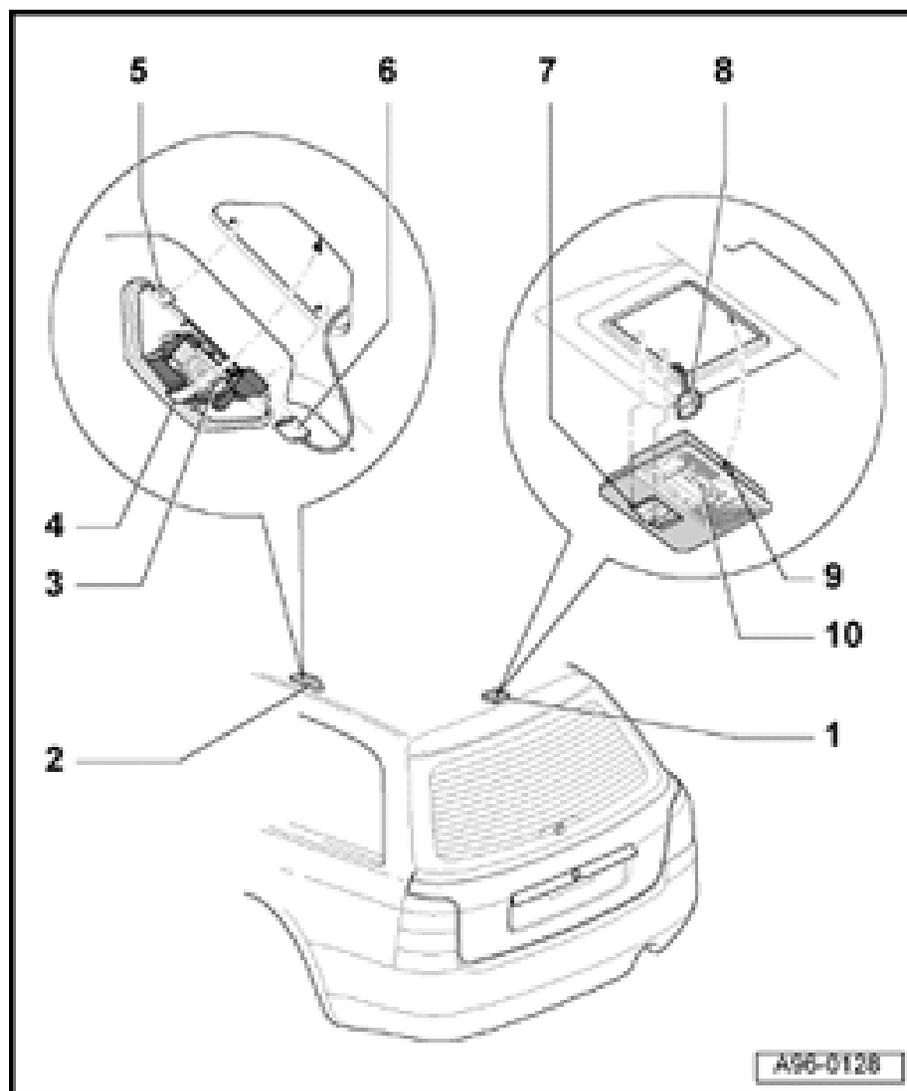

Complete overview

- 1 - Cargo area light
- 2 - Rear interior/reading light, right and left sides
- 3 - Bulb for reading light
 - ◆ 12 V, 5 W
- 4 - Catch
- 5 - Positioning hooks (2x)
- 6 - Reading light harness connector
- 7 - Positioning hooks (2x)
- 8 - Cargo area light harness connector
- 9 - Catch
- 10 - Bulb for cargo area light
 - ◆ 12 V, 10 W

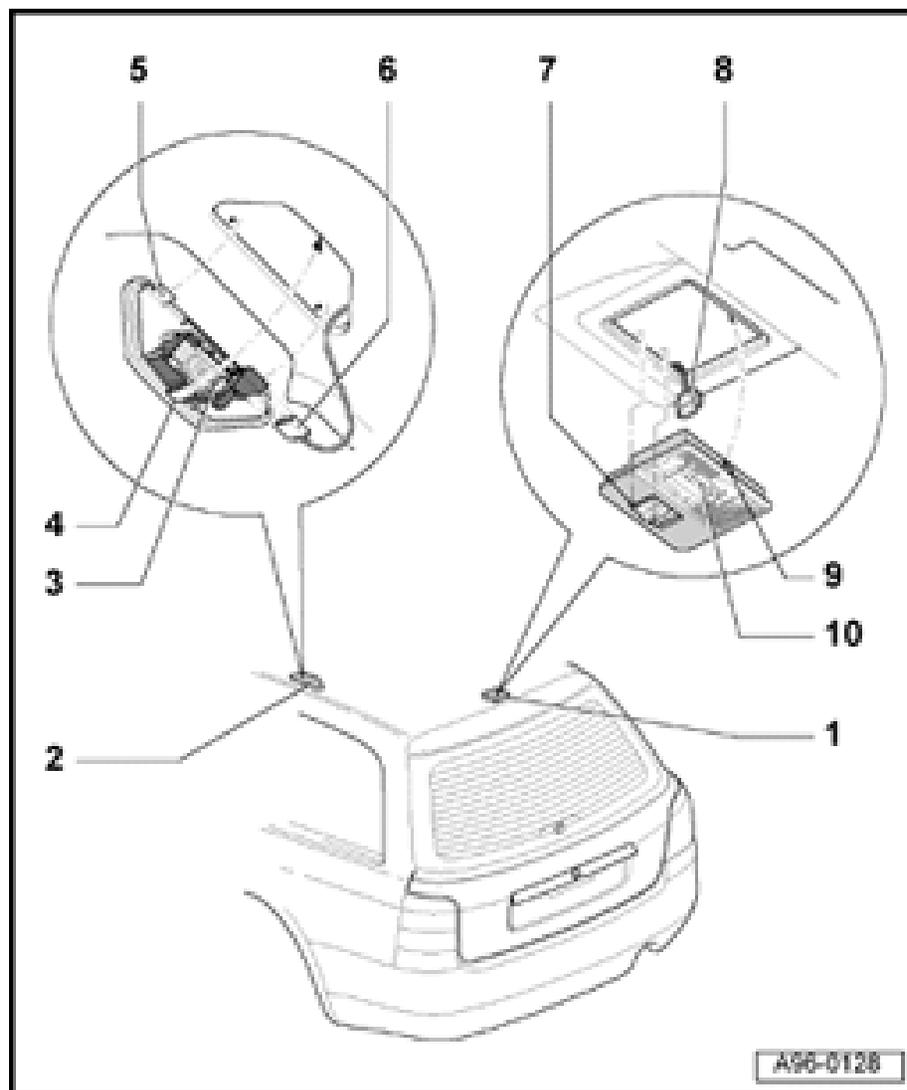


Rear interior/reading lights, removing and installing

Removing

- Using screwdriver, carefully pry out interior/reading light -2- from roof at catch -4-.
- Disconnect harness connector -6-.
- Remove bulb -3- from socket.

Installing

- During installation, insert positioning hooks -5- and, on opposite side, make sure that catch -4- engages audibly.
- Remainder of installation is in reverse order of removal.

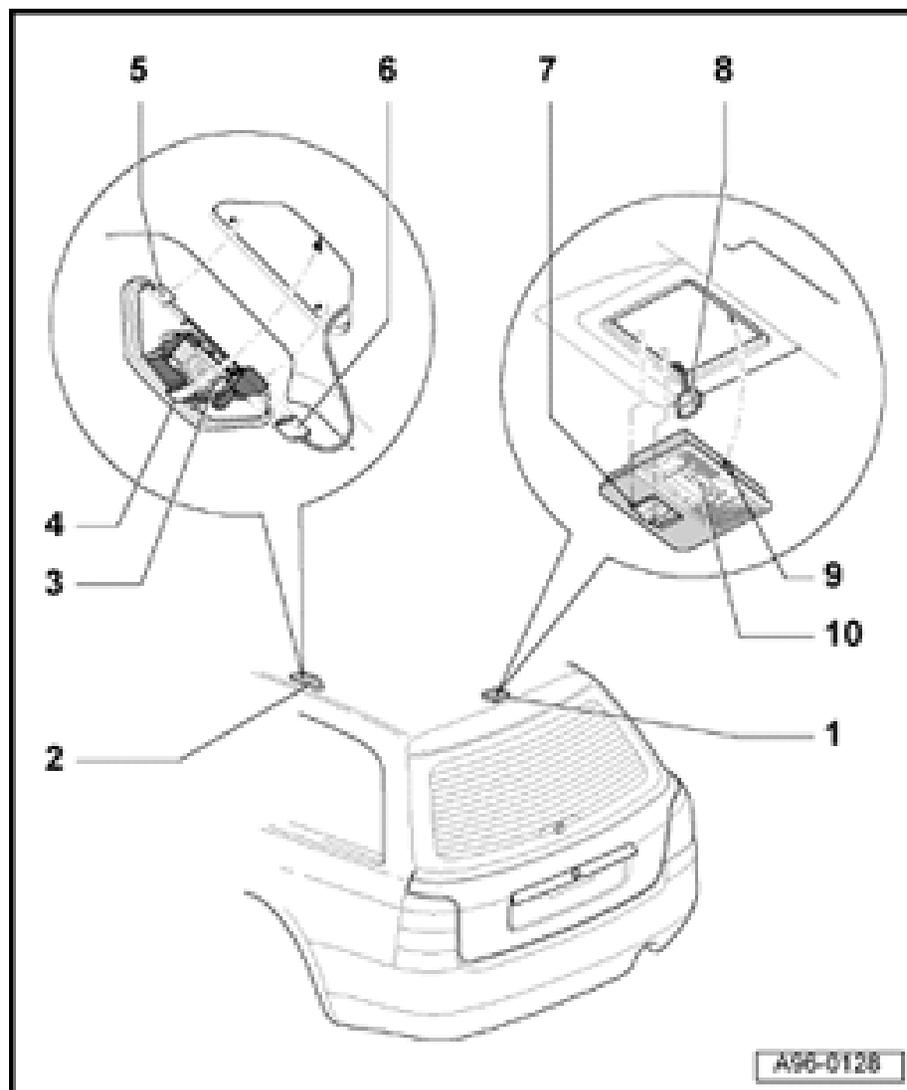

Cargo area light, removing and installing

Removing

- Using screwdriver, carefully pry out cargo area light -1- from roof at catch -9-.
- Disconnect harness connector -8-.
- Remove lens from lamp holder.
- To change bulb, remove bulb from clamp-type socket.

Installing

- During installation, insert positioning hooks -7- and, on opposite side, make sure that catch -9- engages audibly.
- Remainder of installation is in reverse order of removal.