


20-204

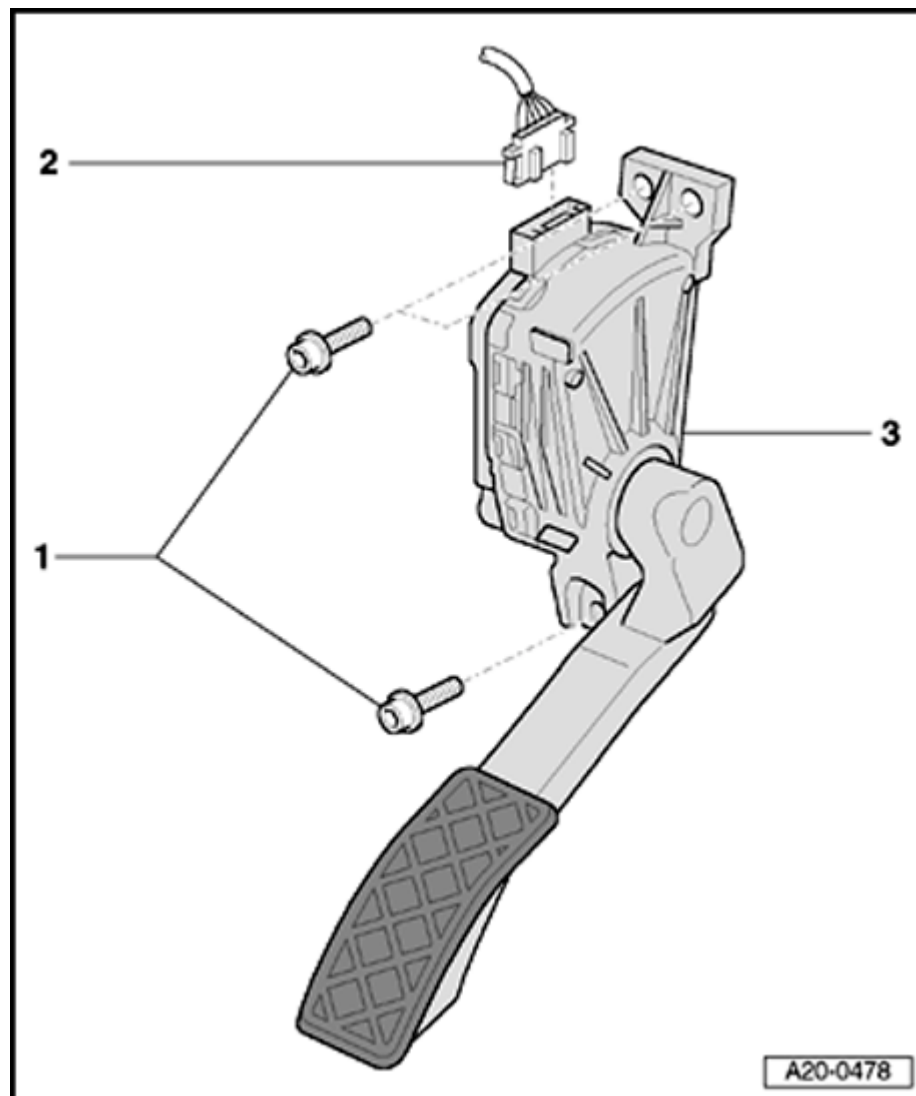

Electronic throttle control (E-Gas), servicing

1 - Socket head bolt 9 Nm

2 - 6-pin connector

3 - Accelerator pedal module

◆ With Throttle Position (TP) sensor -G79- and sender 2 for Accelerator Pedal (AP) position -G185-

◆ Checking:

⇒ *Repair Manual, Fuel Injection & Ignition, Repair Group 24*

◆ Removing and installing ⇒ [Page 20-205](#)

Accelerator pedal module with Throttle Position (TP) sensor, removing and installing

- Remove storage shelf on driver's side:

⇒ [Repair Manual, Body Interior, Repair Group 68](#)

- Disconnect 6-pin connector.
- Remove 3 bolts.

A

- Remove accelerator pedal module -arrow-.

Installation is in reverse order of removal, but do the following:

Tightening torque

Component	Nm
Accelerator pedal module to pedal cluster	9

- Vehicles with automatic transmission must "learn" the kickdown function:

⇒ [Repair Manual, Fuel Injection & Ignition, Repair Group 24](#)

