

Center console switches, removing and installing

CAUTION!


Disconnect the battery Ground (GND) strap before working on the electrical system.

Notes:


- ◆ *Before disconnecting the battery, determine the correct coding for the anti-theft radio.*
- ◆ *After reconnecting the battery, check and activate the vehicle's electrical equipment (radio, clock, comfort and convenience features, etc.) as outlined in this Repair Manual or the Owner's Manual.*

Switches, removing and installing

Removing

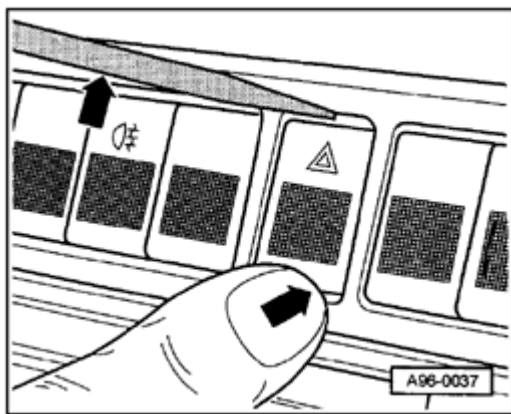

- A
- Insert small screwdriver or flat plastic tool as shown, press against opposite side of switch and pry off switch plate.
 - Tape off area above switches or front of radio with masking tape, if necessary.

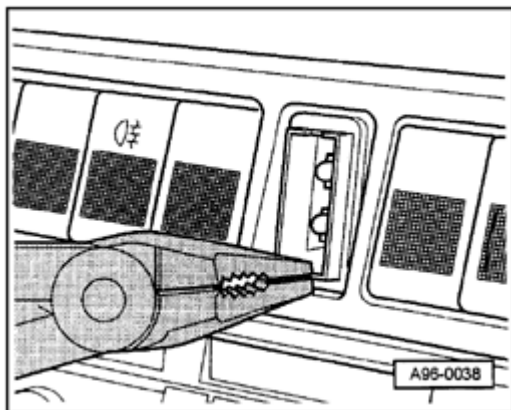


- A
- Pull switch out forward using standard or flat-nose pliers.
 - Disconnect harness connector.

Installing

- Press switch plate onto switch so it engages audibly.
- Connect harness connector and press switch in by hand as far as possible.

Emergency flasher relay, location

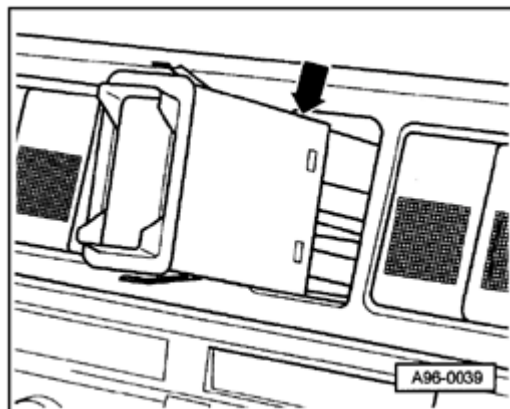

⚡ The emergency flasher relay is integrated in the emergency flasher switch.

- Removing and installing ⇒ [Page 96-2](#) .